



3/5 WIRE RS232 I/FACE

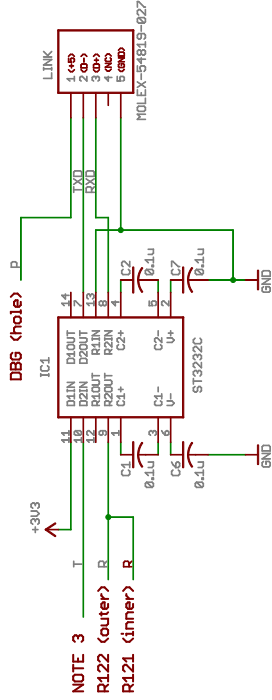

NOTE 5

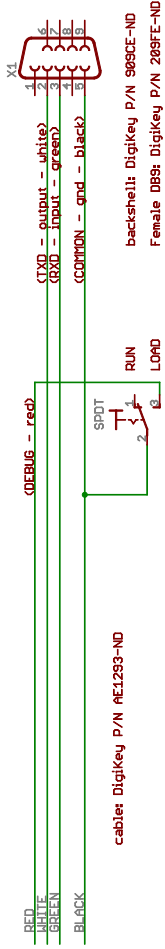


SPDT: DigiKey P/N SM332-ND

cable: DigiKey P/N AE1293-ND

backshell: DigiKey P/N 909CE-ND
Female DB9: DigiKey P/N 209FE-ND


MINIUSB CABLING

miniSD CARD SOCKET

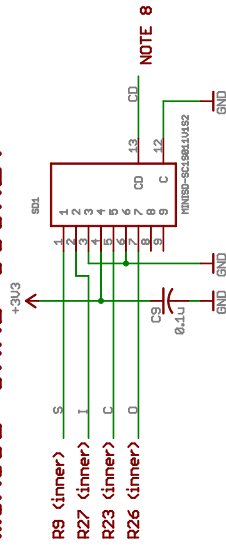

NOTE 8

EL BACKLIGHT SUPPLY

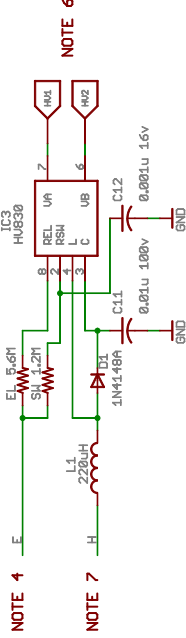

NOTE 4

NOTE 6

NOTES

1. "outer" refers to the lead (pad) nearest (towards) edge of PCB.
2. "inner" refers to the lead (pad) towards the XY center of the PCB.
3. attach to feed thru hole nearest the large GOLD "dot" close to R53
4. E goes to RP4 (inner) on pin nearest R108, -OR-, tie E to GND to disable EL supply.
5. Colors are for reference and may change depending on cable / vendor, the specified cable has a male Type-B miniSD connector attached.
6. The HU pins have about 100 volts on them.
7. H goes to cathode of CR14 (large end), this is input of 3.3v regulator. Input to the EL supply is taken from raw battery / adaptor voltage.
8. Added for completeness of the interface, not used on the ZipIt.

ZipIt Multi Board

TITLE: ZipItMultiBoard-revH

Document Number:

(C) 2006 - WIN3L

Date: 7/19/2006 17:29:33

REV:

F

Sheet 1/1